

P0601 Control Module Read Only Memory (ROM)
P0602 Control Module Not Programmed
P0603 Control Module Long Term Memory Reset
P0604 Control Module Random Access Memory (RAM)
P0605 Control Module Programming Read Only Memory (ROM)
P0606 Control Module Internal Performance
P0607 ECU Malfunction
P0608 Control Module VSS Output "A" Malfunction
P0609 Control Module VSS Output "B" Malfunction
P0610 Control Module Vehicle Options Incorrect
P0615 Starter Relay Control Circuit
P0616 Starter Relay Control Circuit Low Voltage
P0617 Starter Relay Control Circuit High Voltage
P0620 Generator Control Circuit Malfunction
P0621 Generator L-Terminal Circuit
P0622 Generator F-Terminal Circuit
P0625 Generator F-Terminal Circuit Low Voltage
P0626 Generator F-Terminal Circuit High Voltage
P0628 Fuel Pump Relay Control Circuit Low Voltage
P0629 Fuel Pump Relay Control Circuit High Voltage
P0638 Throttle Actuator Control (TAC) Command Performance
P0645 Air Conditioning (A/C) Clutch Relay Control Circuit
P0646 Air Conditioning (A/C) Clutch Relay Control Circuit
P0647 Air Conditioning (A/C) Clutch Relay Control Circuit
P0650 Malfunction Indicator Lamp (MIL) Control Circuit
P0654 Engine RPM Output Circuit Malfunction
P0655 Engine Hot Lamp Output Control Circuit Malfunction
P0656 Fuel Level Output Circuit Malfunction
P0660 Intake Manifold Tuning (IMT) Valve Solenoid Control Circuit
P0661 Intake Manifold Tuning (IMT) Valve Solenoid Control Circuit Low Voltage
P0662 Intake Manifold Tuning (IMT) Valve Solenoid Control Circuit High Voltage
P0691 Cooling Fan Relay Control Circuit Low Voltage
P0693 Cooling Fan Relay Control Circuit Low Voltage
P0692 Cooling Fan Relay Control Circuit High Voltage
P0694 Cooling Fan Relay Control Circuit High Voltage
P0700 Transmission Control System Malfunction
P0701 Transmission Control System Range/Performance
P0702 Transmission Control System Electrical
P0703 Brake Switch Circuit Malfunction
P0704 Clutch Switch Input Circuit Malfunction
P0705 Trans Range Switch Circuit
P0706 Trans Range Switch Performance
P0707 Transmission Range Sensor Circuit Low Input
P0708 Transmission Range Sensor Circuit High Input
P0709 Transmission Range Sensor Circuit Intermittent
P0710 Transmission Fluid Temperature Sensor Circuit Malfunction
P0711 TFT Sensor Circuit Range/Performance
P0712 Transmission Fluid Temperature (TFT) Sensor Circuit Low Input
P0713 Transmission Fluid Temperature (TFT) Sensor Circuit High Input
P0714 Transmission Fluid Temperature Sensor Circuit Intermittent
P0715 Input/Turbine Speed Sensor Circuit Malfunction
P0716 Input Speed Sensor Circuit Intermittent
P0717 Input Speed Sensor Circuit Low Input
P0718 Input/Turbine Speed Sensor Circuit Intermittent
P0719 Brake Switch Circuit Low Input
P0720 Output Speed Sensor Circuit Malfunction
P0721 Output Speed Sensor Range/Performance
P0722 Output Speed Sensor Circuit Low Input
P0723 Output Speed Sensor Intermittent
P0724 Brake Switch Circuit High Input
P0725 Engine Speed Input Circuit
P0726 Engine Speed Input Circuit Range/Performance
P0727 Engine Speed Circuit No Signal
P0728 Engine Speed Input Circuit Intermittent
P0730 Incorrect Gear Ratio
P0731 Incorrect 1st Gear Ratio
P0732 Incorrect 2nd Gear Ratio
P0733 Incorrect 3rd Gear Ratio
P0734 Incorrect 4th Gear Ratio
P0735 Gear 5 Incorrect ratio
P0736 Reverse incorrect gear ratio
P0740 TCC Enable Solenoid Circuit Electrical
P0741 TCC System Stuck Off
P0742 TCC System Stuck On
P0743 TCC Enable Solenoid Circuit Electrical
P0744 Torque Converter Clutch Circuit Intermittent

P0745 Pressure Control Solenoid Malfunction
P0746 Pressure Control Solenoid Performance or Stuck Off
P0747 Pressure Control Solenoid Stuck On
P0748 Pressure Control Solenoid Circuit Electrical
P0749 Pressure Control Solenoid Intermittent
P0750 Shift Solenoid A Malfunction
P0751 1-2 Shift Solenoid Valve Performance - No First or Fourth Gear
P0752 1-2 Shift Solenoid Valve Performance - No Second or Third Gear
P0753 1-2 Shift Solenoid Circuit Electrical
P0754 Shift Solenoid A Intermittent
P0755 Shift Solenoid B Malfunction
P0756 2-3 Shift Solenoid Valve Performance - No First or Second Gear
P0757 2-3 Shift Solenoid Valve Performance - No Third or Fourth Gear
P0758 2-3 Shift Solenoid Circuit Electrical
P0759 Shift Solenoid B Intermittent
P0760 Shift Solenoid C Malfunction
P0761 Shift Solenoid C Performance or Stuck Off
P0762 Shift Solenoid C Stuck On
P0763 Shift Solenoid C Electrical
P0764 Shift Solenoid C Intermittent
P0765 Shift Solenoid D Malfunction
P0766 Shift Solenoid D Performance or Stuck Off
P0767 Shift Solenoid D Stuck On
P0768 Shift Solenoid D Electrical
P0769 Shift Solenoid D Intermittent
P0770 Shift Solenoid E Malfunction
P0771 Shift Solenoid E Performance or Stuck Off
P0772 Shift Solenoid E Stuck On
P0773 Shift Solenoid E Electrical
P0774 Shift Solenoid E Intermittent
P0780 Shift Malfunction
P0781 1-2 Shift Malfunction
P0782 2-3 Shift Malfunction
P0783 3-4 Shift Malfunction
P0784 4-5 Shift Malfunction
P0785 3-2 Shift Solenoid Circuit Electrical
P0786 Shift/Timing Solenoid Range/Performance
P0787 Shift/Timing Solenoid Low
P0788 Shift/Timing Solenoid High
P0789 Shift/Timing Solenoid Intermittent
P0790 Normal/Performance Switch Circuit Malfunction
P0801 Reverse Inhibit Control Circuit Malfunction
P0803 1-4 Upshift (Skip Shift) Solenoid Control Circuit Malfunction
P0804 1-4 Upshift (Skip Shift) Lamp Control Circuit Malfunction
P0850 Park/Neutral Position (PNP) Switch Circuit
P0856 Powertrain Indicated Traction Control Malfunction