

P0400 Exhaust Gas Recirculation Flow Malfunction
P0401 Exhaust Gas Recirculation (EGR) Flow Insufficient
P0402 Exhaust Gas Recirculation Flow Excessive Detected
P0403 Exhaust Gas Recirculation (EGR) Solenoid Control Circuit
P0404 Exhaust Gas Recirculation (EGR) Open Position Performance
P0405 Exhaust Gas Recirculation (EGR) Position Sensor Circuit Low Voltage
P0406 Exhaust Gas Recirculation Sensor A Circuit High
P0407 Exhaust Gas Recirculation Sensor B Circuit Low
P0408 Exhaust Gas Recirculation Sensor B Circuit High
P0410 Secondary Air Injection (AIR) System
P0411 Secondary Air Injection (AIR) System
P0412 Secondary Air Injection (AIR) Solenoid Relay Control Circuit Bank 1
P0413 Secondary Air Injection System Switching Valve A Circuit Open
P0414 Secondary Air Injection System Switching Valve A Circuit Shorted
P0415 Secondary Air Injection System Switching Valve B Circuit Malfunction
P0416 Secondary Air Injection System Switching Valve B Circuit Open
P0417 Secondary Air Injection System Switching Valve B Circuit Shorted
P0418 Secondary Air Injection (AIR) Pump Relay Control Circuit Bank 1
P0419 Secondary Air Injection (AIR) Pump Relay Control Circuit Bank 2
P0420 Catalyst System Low Efficiency
P0421 Warm Up Catalyst Efficiency Below Threshold (Bank 1)
P0422 Catalyst System Low Efficiency Bank 1
P0423 Heated Catalyst Efficiency Below Threshold (Bank 1)
P0424 Heated Catalyst Temperature Below Threshold (Bank 1)
P0430 Catalyst System Low Efficiency Bank 2
P0431 Warm Up Catalyst Efficiency Below Threshold (Bank 2)
P0432 Catalyst System Low Efficiency Bank 2
P0433 Heated Catalyst Efficiency Below Threshold (Bank 2)
P0434 Heated Catalyst Temperature Below Threshold (Bank 2)
P0440 Evaporative Emission (EVAP) System
P0441 Evaporative Emission Control System Incorrect Purge Flow
P0442 Evaporative Emission (EVAP) System Small Leak Detected
P0443 EVAP Purge Solenoid Valve 1 Control CKT
P0444 Evaporative Emission Control System Purge Control Valve Circuit Open
P0445 Evaporative Emission Control System Purge Control Valve Circuit Shorted
P0446 EVAP Vent Solenoid Valve Control System
P0447 Evaporative Emission Control System Vent Control Circuit Open
P0448 Evaporative Emission Control System Vent Control Circuit Shorted
P0449 Evaporative Emission (EVAP) Vent Solenoid Control Circuit
P0450 Fuel Tank Pressure Sensor Circuit
P0451 Evaporative Emission Control System Pressure Sensor Range/Performance
P0452 Fuel Tank Pressure Sensor Circuit Low Voltage
P0453 Fuel Tank Pressure Sensor Circuit High Voltage
P0454 Evaporative Emission Control System Pressure Sensor Intermittent
P0455 Evaporative Emission (EVAP) System Leak Detected
P0460 Fuel Level Sensor Circuit
P0461 Fuel Level Sensor Performance
P0462 Fuel Level Sensor Circuit Low Voltage
P0463 Fuel Level Sensor Circuit High Voltage
P0464 Fuel Level Sensor Circuit Intermittent
P0465 Purge Flow Sensor Circuit Malfunction
P0466 Purge Flow Sensor Circuit Range/Performance
P0467 Purge Flow Sensor Circuit Low Input
P0468 Purge Flow Sensor Circuit High Input
P0469 Purge Flow Sensor Circuit Intermittent
P0470 Exhaust Pressure Sensor Malfunction
P0471 Exhaust Pressure Sensor Range/Performance
P0472 Exhaust Pressure Sensor Low
P0473 Exhaust Pressure Sensor High
P0474 Exhaust Pressure Sensor Intermittent
P0475 Exhaust Pressure Control Valve Malfunction
P0476 Exhaust Pressure Control Valve Range/Performance
P0477 Exhaust Pressure Control Valve Low
P0478 Exhaust Pressure Control Valve High
P0479 Exhaust Pressure Control Valve Intermittent
P0480 Cooling Fan Relay 1 Control Circuit
P0481 Cooling Fan Relay 2 Control Circuit
P0482 Cooling Fan 3 Control Circuit Malfunction
P0483 Cooling Fan Rationality Check Malfunction
P0484 Cooling Fan Circuit Over Current
P0485 Cooling Fan Power/Ground Circuit Malfunction
P0496 Evaporative Emission (EVAP) System Flow During Non-Purge
P0500 Vehicle Speed Sensor (VSS) Circuit
P0501 Vehicle Speed Sensor (VSS) Range/Performance
P0502 Vehicle Speed Sensor (VSS) Circuit Low Input
P0503 Vehicle Speed Sensor (VSS) Circuit Intermittent

P0505 Idle Control System Malfunction
P0506 Idle Speed Low
P0507 Idle Speed High
P0510 Closed Throttle Position Switch Malfunction
P0512 Start Switch Circuit
P0520 Engine Oil Pressure Sensor/Switch Circuit Malfunction
P0521 Engine Oil Pressure Sensor/Switch Circuit Range/Performance
P0522 Engine Oil Pressure Sensor/Switch Circuit Low Voltage
P0523 Engine Oil Pressure Sensor/Switch Circuit High Voltage
P0530 A/C Refrigerant Pressure Sensor Circuit Malfunction
P0531 A/C Refrigerant Pressure Sensor Circuit Range/Performance
P0532 Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit Low Voltage
P0533 Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit High Voltage
P0534 Air Conditioner Refrigerant Charge Loss
P0550 Power Steering Pressure (PSP) Switch Circuit
P0551 Power Steering Pressure Sensor Circuit Range/Performance
P0552 Power Steering Pressure Sensor Circuit Low Input
P0553 Power Steering Pressure Sensor Circuit High Input
P0554 Power Steering Pressure Sensor Circuit Intermittent
P0560 System Voltage
P0561 System Voltage Unstable
P0562 System Voltage Low
P0563 System Voltage High
P0565 Cruise Control On Signal Malfunction
P0566 Cruise Control Off Signal Malfunction
P0567 Cruise Control Resume Signal Malfunction
P0568 Cruise Control Set Signal Malfunction
P0569 Cruise Control Coast Signal Malfunction
P0570 Cruise Control Accel Signal Malfunction
P0571 Cruise Control Brake Switch Circuit
P0573 Cruise Control/Brake Switch A Circuit High
P0574 Vehicle Speed Too High - Cruise Control Disabled
P0575 Cruise Control Related Malfunction
P0576 Cruise Control Related Malfunction
P0576 Cruise Control Related Malfunction
P0578 Cruise Control Related Malfunction
P0579 Cruise Control Related Malfunction
P0580 Cruise Control Related Malfunction
P0600 Serial Communication Link Malfunction