

P0200 Injector Control Circuit
P0201 Injector 1 Control Circuit
P0202 Injector 2 Control Circuit
P0203 Injector 3 Control Circuit
P0204 Injector 4 Control Circuit
P0205 Injector 5 Control Circuit
P0206 Injector 6 Control Circuit
P0207 Injector 7 Control Circuit
P0208 Injector 8 Control Circuit
P0209 Injector 9 Control Circuit
P0210 Injector 10 Control Circuit
P0211 Injector 11 Control Circuit
P0212 Injector 12 Control Circuit
P0213 Cold Start Injector 1
P0214 Cold Start Injector 2
P0215 Engine Shutoff Control Circuit
P0216 Injection Timing Control Circuit
P0217 Engine Overtemp Condition
P0218 Transmission Fluid Overtemperature
P0219 Engine Overspeed Condition
P0220 APP Sensor 2 Circuit
P0221 APP (Throttle Position) Sensor 2 Circuit Performance
P0222 APP (Throttle Position) Sensor 2 Circuit Low Voltage
P0223 APP (Throttle Position) Sensor 2 Circuit High Voltage
P0224 Throttle Position Sensor 2 Intermittent
P0225 APP Sensor 3 Circuit
P0226 APP Sensor 3 Circuit Performance
P0227 APP Sensor 3 Circuit Low Voltage
P0228 APP Sensor 3 Circuit High Voltage
P0229 Throttle Position Sensor 3 Intermittent
P0230 Fuel Pump Relay Control Circuit
P0231 Fuel Pump Feedback Circuit Low Voltage
P0232 Fuel Pump Feedback Circuit High Voltage
P0233 Fuel Pump Secondary Circuit Intermittent
P0234 TC Engine Overboost Condition
P0235 Turbocharger Boost Sensor 1 Circuit
P0236 TC Boost System
P0237 TC Boost Sensor Circuit Low Voltage
P0238 TC Boost Sensor Circuit High Voltage
P0239 Turbocharger Boost Sensor 2 Circuit
P0240 Turbocharger Boost Sensor 2 Performance
P0241 Turbocharger Boost Sensor 2 Circuit Low Voltage
P0242 Turbocharger Boost Sensor 2 Circuit High Voltage
P0243 Turbocharger Wastegate Solenoid 1
P0244 Turbocharger Wastegate Solenoid 1 Performance
P0245 Turbocharger Wastegate Solenoid 1 Low Voltage
P0246 Turbocharger Wastegate Solenoid 1 High Voltage
P0247 Turbocharger Wastegate Solenoid 2
P0248 Turbocharger Wastegate Solenoid 2 Performance
P0249 Turbocharger Wastegate Solenoid 2 Low Voltage
P0250 Turbocharger Wastegate Solenoid 2 High Voltage
P0251 Injection Pump Fuel Metering Control "A" Malfunction (Cam/Rotor/Injector)
P0252 Injection Pump Fuel Metering Control "A" Range/Performance (Cam/Rotor/Injector)
P0253 Injection Pump Fuel Metering Control "A" Low (Cam/Rotor/Injector)
P0254 Injection Pump Fuel Metering Control "A" High (Cam/Rotor/Injector)
P0255 Injection Pump Fuel Metering Control "A" Intermittent (Cam/Rotor/Injector)
P0256 Injection Pump Fuel Metering Control "B" Malfunction (Cam/Rotor/Injector)
P0257 Injection Pump Fuel Metering Control "B" Range/Performance (Cam/Rotor/Injector)
P0258 Injection Pump Fuel Metering Control "B" Low (Cam/Rotor/Injector)
P0259 Injection Pump Fuel Metering Control "B" High (Cam/Rotor/Injector)
P0260 Injection Pump Fuel Metering Control "B" Intermittent (Cam/Rotor/Injector)
P0261 Cylinder 1 Injector Circuit Low
P0262 Cylinder 1 Injector Circuit High
P0263 Cylinder 1 Contribution/Balance Fault
P0264 Cylinder 2 Injector Circuit Low
P0265 Cylinder 2 Injector Circuit High
P0266 Cylinder 2 Contribution/Balance Fault
P0267 Cylinder 3 Injector Circuit Low
P0268 Cylinder 3 Injector Circuit High
P0269 Cylinder 3 Contribution/Balance Fault
P0270 Cylinder 4 Injector Circuit Low
P0271 Cylinder 4 Injector Circuit High
P0272 Cylinder 4 Contribution/Balance Fault
P0273 Cylinder 5 Injector Circuit Low
P0274 Cylinder 5 Injector Circuit High
P0275 Cylinder 5 Contribution/Balance Fault

P0276 Cylinder 6 Injector Circuit Low
P0277 Cylinder 6 Injector Circuit High
P0278 Cylinder 6 Contribution/Balance Fault
P0279 Cylinder 7 Injector Circuit Low
P0280 Cylinder 7 Injector Circuit High
P0281 Cylinder 7 Contribution/Balance Fault
P0282 Cylinder 8 Injector Circuit Low
P0283 Cylinder 8 Injector Circuit High
P0284 Cylinder 8 Contribution/Balance Fault
P0285 Cylinder 9 Injector Circuit Low
P0286 Cylinder 9 Injector Circuit High
P0287 Cylinder 9 Contribution/Balance Fault
P0288 Cylinder 10 Injector Circuit Low
P0289 Cylinder 10 Injector Circuit High
P0290 Cylinder 10 Contribution/Balance Fault
P0291 Cylinder 11 Injector Circuit Low
P0292 Cylinder 11 Injector Circuit High
P0293 Cylinder 11 Contribution/Balance Fault
P0294 Cylinder 12 Injector Circuit Low
P0295 Cylinder 12 Injector Circuit High
P0296 Cylinder 12 Contribution/Range Fault
P0300 Engine Misfire Detected
P0301 Cylinder 1 Misfire Detected
P0302 Cylinder 2 Misfire Detected
P0303 Cylinder 3 Misfire Detected
P0304 Cylinder 4 Misfire Detected
P0305 Cylinder 5 Misfire Detected
P0306 Cylinder 6 Misfire Detected
P0307 Cylinder 7 Misfire Detected
P0308 Cylinder 8 Misfire Detected
P0309 Cylinder 9 Misfire Detected
P0311 Cylinder 11 Misfire Detected
P0312 Cylinder 12 Misfire Detected
P0313 Misfire Detected With Low Fuel Level
P0318 Rough Road Sensor Circuit
P0320 Ignition/Distributor Engine Speed Input Circuit Malfunction
P0321 Ignition/Distributor Engine Speed Input Circuit Range/Performance
P0322 IC Module 4X Reference CKT No Frequency
P0323 Ignition/Distributor Engine Speed Input Circuit Intermittent
P0324 Knock Sensor (KS) Module Performance
P0325 PCM Knock Sensor Circuit
P0326 Knock Sensor CKT Excessive Spark Retard
P0327 Knock Sensor Circuit Low Voltage
P0328 Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)
P0329 Knock Sensor 1 Circuit Intermittent (Bank 1 or Single Sensor)
P0330 Knock Sensor (KS) Circuit Bank 2
P0331 Knock Sensor 2 Circuit Range/Performance (Bank 2)
P0332 Knock Sensor 2 Circuit Low Input (Bank 2)
P0333 Knock Sensor 2 Circuit High Input (Bank 2)
P0334 Knock Sensor 2 Circuit Intermittent (Bank 2)
P0335 CKP Sensor A Circuit Performance
P0336 Crankshaft Position (CKP) Sensor A Performance
P0337 Crankshaft Position (CKP) Sensor Circuit Low Duty Cycle
P0338 Crankshaft Position (CKP) Sensor Circuit High Duty Cycle
P0339 Crankshaft Position (CKP) Sensor Circuit Intermittent
P0340 Camshaft Position (CMP) Sensor Circuit
P0341 Camshaft Position (CMP) Sensor Performance
P0342 Camshaft Position Sensor Circuit Low Input
P0343 Camshaft Position Sensor Circuit High Input
P0344 Camshaft Position Sensor Circuit Intermittent
P0350 Ignition Coil Primary/Secondary Circuit Malfunction
P0351 Ignition Coil 1 Control Circuit
P0352 Ignition Coil 2 Control Circuit
P0353 Ignition Coil 3 Control Circuit
P0354 Ignition Coil 4 Control Circuit
P0355 Ignition Coil 5 Control Circuit
P0356 Ignition Coil 6 Control Circuit
P0357 Ignition Coil 7 Control Circuit
P0358 Ignition Coil 8 Control Circuit
P0359 Ignition Coil I Primary/Secondary Circuit Malfunction
P0360 Ignition Coil J Primary/Secondary Circuit Malfunction
P0361 Ignition Coil K Primary/Secondary Circuit Malfunction
P0362 Ignition Coil L Primary/Secondary Circuit Malfunction
P0370 Timing Reference High Resolution Signal A Malfunction
P0371 IC 24X Reference CKT Too Many Pulses
P0372 IC 24X Reference Circuit Missing Pulses

P0373 Timing Reference High Resolution Signal A Intermittent/Erratic Pulses
P0374 Timing Reference High Resolution Signal A No Pulses
P0375 Timing Reference High Resolution Signal B Malfunction
P0376 Timing Reference High Resolution Signal B Too Many Pulses
P0377 Timing Reference High Resolution Signal B Too Few Pulses
P0378 Timing Reference High Resolution Signal B Intermittent/Erratic Pulses
P0379 Timing Reference High Resolution Signal B No Pulses
P0380 Glow Plug/Heater Circuit "A" Malfunction
P0381 Glow Plug/Heater Indicator Circuit Malfunction
P0382 Exhaust Gas Recirculation Flow Malfunction
P0385 Crankshaft Position (CKP) Sensor B Circuit
P0386 Crankshaft Position (CKP) Sensor B Performance
P0387 Crankshaft Position Sensor B Circuit Low Input
P0388 Crankshaft Position Sensor B Circuit High Input
P0389 Crankshaft Position Sensor B Circuit Intermittent