

P1800 TCM Power Relay Control Circuit
P1801 Performance Selector Switch Failure
P1804 Ground Control Relay
P1810 TFP Valve Position Switch Circuit
P1811 Maximum Adapt and Long Shift
P1812 Transmission Over Temperature Condition
P1813 Torque Control
P1814 Torque Converter Overstressed
P1815 Transmission Range Switch - Start In Wrong Range
P1816 TFP Valve Position Sw. - Park/Neu. With Drive Ratio
P1817 TFP Valve Position Sw. - Reverse With Drive Ratio
P1818 TFP Valve Position Sw. - Drive Without Drive Ratio
P1819 Internal Mode Switch - No Start\Wrong Range
P1820 Internal Mode Switch Circuit A Low
P1822 Internal Mode Switch Circuit B High
P1823 Internal Mode Switch Circuit P Low
P1825 Internal Mode Switch - Invalid Range
P1826 Internal Mode Switch Circuit C - High
P1831 Pressure Control (PC) Solenoid Power Circuit - Low Voltage
P1832 Pressure Control (PC)/Shift Lock Solenoid Control Circuit High Voltage
P1833 A/T Solenoids Power Circuit - Low Voltage
P1834 Torque Converter Clutch (TCC)/Shift Solenoid (SS) Control Circuit High Voltage
P1835 Kick-Down Switch Circuit
P1836 Kick-Down Switch Failed Open
P1837 Kick-Down Switch Failed Short
P1842 1-2 Shift Solenoid Circuit Low Voltage
P1843 1-2 Shift Solenoid Circuit High Voltage
P1844 Torque Reduction Signal Circuit Desired By TCM
P1845 2-3 Shift Solenoid Circuit Low Voltage
P1847 2-3 Shift Solenoid Circuit High Voltage
P1850 Brake Band Apply Solenoid Circuit
P1851 Brake Band Apply Solenoid Performance
P1852 Brake Band Apply Solenoid Low Voltage
P1853 Brake Band Apply Solenoid High Voltage
P1860 TCC PWM Solenoid Circuit Electrical
P1864 Torque Converter Clutch Circuit
P1865 4-5 Shift Solenoid (SS) Valve Control Circuit High Voltage
P1866 Torque Converter Clutch (TCC) Pulse Width Modulation (PWM) Solenoid Control Circuit Low Voltage
P1867 Torque Converter Clutch (TCC) Pulse Width Modulation (PWM) Solenoid Control Circuit High Voltage
P1868 Transmission Fluid Life
P1870 Transmission Component Slipping
P1871 Undefined Gear Ratio
P1873 TCC Stator Temp. Switch Circuit Low
P1874 TCC Stator Temp. Switch Circuit High
P1875 4WD Low Switch Circuit Electrical
P1884 TCC Enable/Shift Light Circuit
P1886 Shift Timing Solenoid
P1887 TCC Release Switch Circuit
P1890 ECM Data Input Circuit
P1890 Throttle Position Signal Input
P1891 Throttle Position Sensor PWM Signal Low
P1892 Throttle Position Sensor PWM Signal High
P1893 Engine Torque Signal Low Voltage
P1894 Engine Torque Signal High Voltage